


SIAMP

GB

Monaco

INLET VALVES ASSEMBLY INSTRUCTIONS

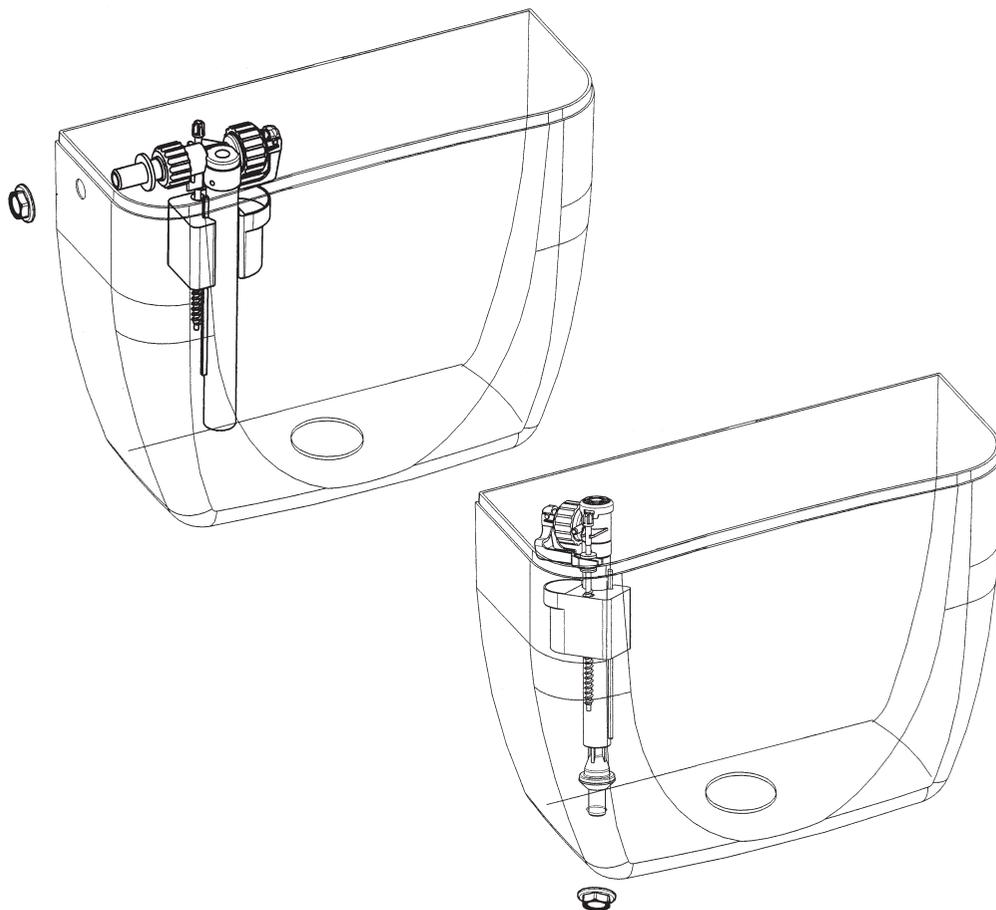

4, quai Antoine 1^{er} - BP 219 - MC 98007 MONACO Cedex

Tél. 00 377 93 15 53 75 - Fax : 00 377 92 05 71 04


E-mail: contact@siamp.com

SIAMP UK LIMITED

UNIT 4E WILSONS PARK - MONSALL ROAD - NEWTON HEATH
MANCHESTER M40 8WN - UNITED KINGDOM - PHONE: +44.1612051200


ROBECO 06 and STANDARD 15 EL

- 1 Place inlet valve through inlet hole
- 2 Secure with backnut
- 3 Connect the supply
- 4 Adjust water level with adjusting screw.

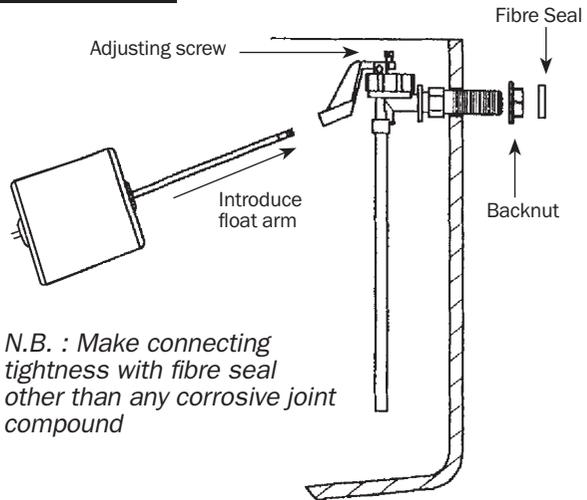

N.B. : Make connecting tightness with fibre seal other than any corrosive joint compound


COMPACT 95L/93L

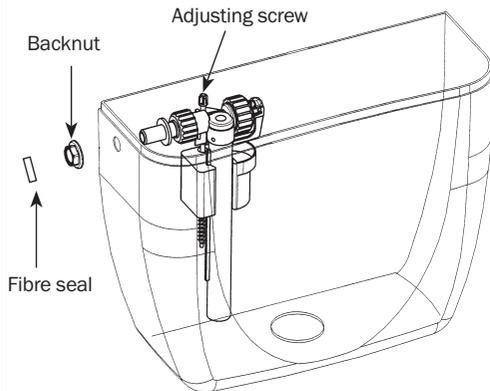


- 1 Place inlet valve through inlet hole
- 2 Secure with backnut
- 3 Connect the supply
- 4 Adjust water level with grey adjusting screw.

N.B. : Make connecting tightness with fibre seal other than any corrosive joint compound

MAINTENANCE 95L

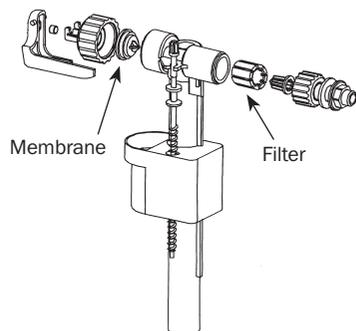

COMPACT 99B

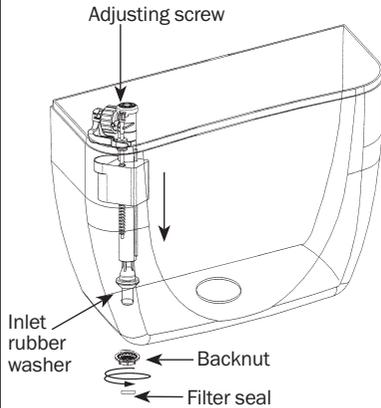

- ❶ Place inlet valve through inlet hole with inlet rubber washer inside the cistern
- ❷ Secure with backnut
- ❸ Connect the supply
- ❹ Adjust water level with grey adjusting screw.

N.B. Ensure tightness of connection to cistern with filter gasket.


WARNINGS:

- 1 - Do not overtight in any case.
- 2 - Do not use any sealing paste and/or compound in any case
- 3 - Do not use connector handling the internal part of the inlet valve.

SIAMP will be not responsible in case these warnings are not respected.

An approved double check valve or some other no less effective backflow prevention device shall be fitted at the point of connection(s) between the supply and the fitting.

COMPACT 99B with telescopic tube

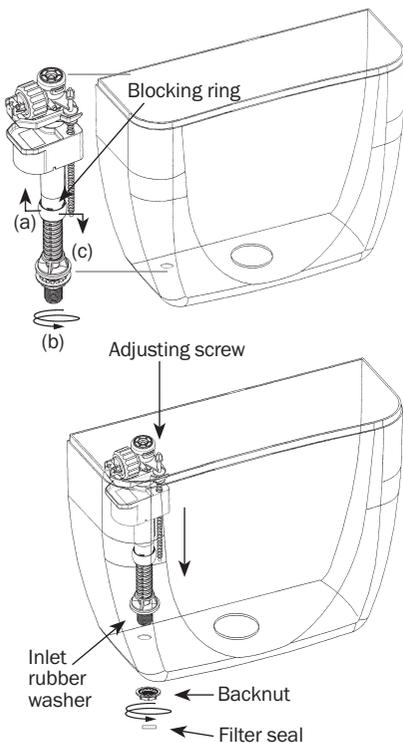

- ❶ Adjust telescopic tube
 - (a) raise the grey blocking ring
 - (b) screw or unscrew the graduated tube in way so that the inlet top not exceed the top of the tank
 - (c) position back the grey ring
- ❷ Place inlet valve through inlet hole with inlet rubber washer inside the cistern
- ❸ Secure with backnut
- ❹ Connect the supply
- ❺ Adjust water level with grey adjusting screw.

N.B. Ensure tightness of connection to cistern with filter gasket.


WARNINGS:

- 1 - Do not overtight in any case.
- 2 - Do not use any sealing paste and/or compound in any case
- 3 - Do not use connector handling the internal part of the inlet valve.

SIAMP will be not responsible in case these warnings are not respected.

MAINTENANCE


Membrane

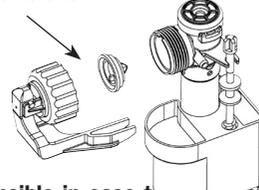


HANDY 93B

- ❶ Place inlet valve through inlet hole with inlet rubber washer inside the cistern
- ❷ Secure with backnut
- ❸ Connect the supply
- ❹ Adjust water level with grey adjusting screw.

N.B. : Make connecting tightness with fibre seal other than any corrosive joint compound

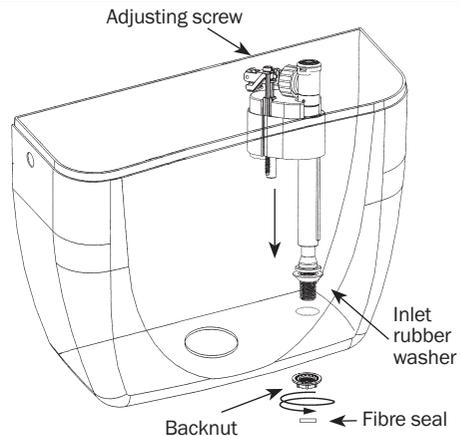

HANDY 93B with telescopic tube

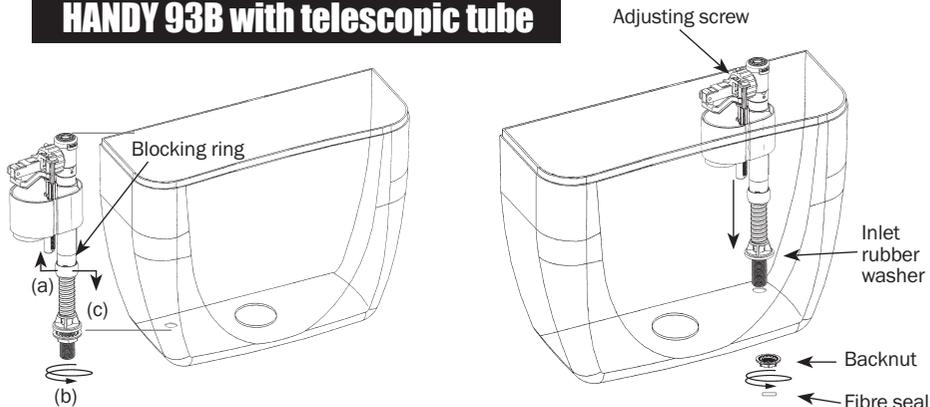

- ❶ Adjust telescopic tube (a) raise the grey blocking ring, (b) screw or unscrew the gradiated tube in way so that the inlet top not exceed the top of the tank, (c) position back the grey ring
- ❷ Place inlet valve through inlet hole with inlet rubber washer inside the cistern
- ❸ Secure with backnut
- ❹ Connect the supply
- ❺ Adjust water level with grey adjusting screw.

N.B. : Make connecting tightness with fibre seal other than any corrosive joint compound

For all inlet valves : manually screw the backnut until it is in contact with the ceramic. If necessary give an extra quarter turn (maximum).

N.B.: Excessive tightening can damage the valve and would not be covered by the guarantee. Ensure tightness of connection to cistern with filter gasket.

SIAMP will be not responsible in case these warnings are not respected.

N.B.: In the tank, do not use any anti limescale products or chlorine based products which could damage the mechanism and would not be covered by the guarantee. For the maintenance of your unit, we recommend you to use the MULTICARE WC overall maintenance system.