


SIAMP


Monaco

GB

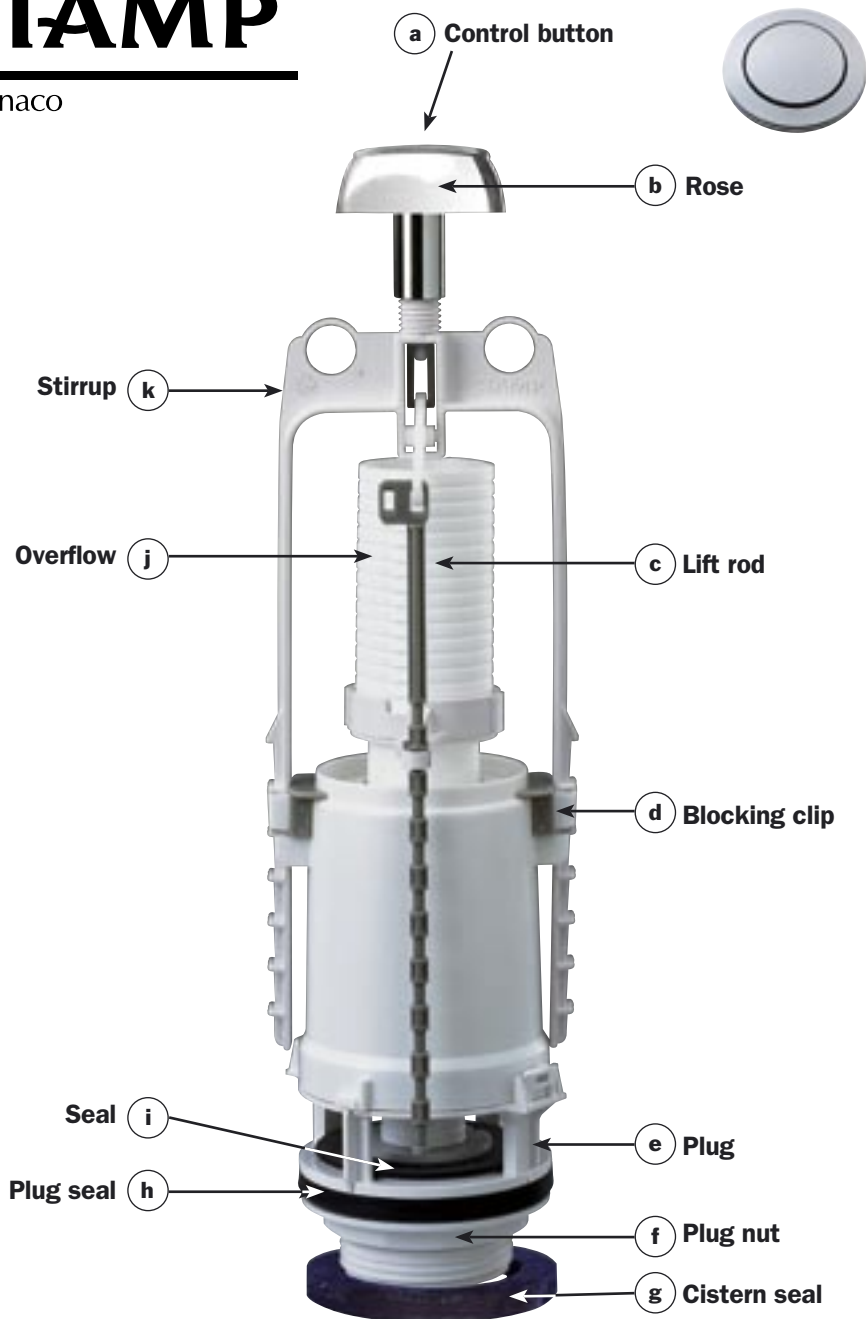

STORM^{33A} / SWITCH^{22A}

I - PREPARATION OF THE MECHANISM

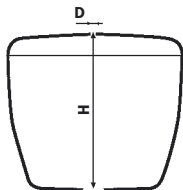


Measure the cistern:


- H (from top of lid to inside bottom of cistern)
- D (diameter of hole in lid)

⚠ Check the positioning of the stirrup
if the stirrup (k) is positioned correctly with reference to the table below, move on to step 8; otherwise, go through all the following steps in order:

- 1 Unclip the lift rod (c)
- 2 Remove the 2 grey blocking clips (d)
- 3 Remove the stirrup (k)
- 4 If necessary, cut the overflow (j) as shown in the table
- 5 Set the stirrup (k) in the suitable notch - see table
- 6 Clip the 2 grey blocking clips (d) back in place
- 7 Clip on the lift rod (c)
- 8 Unscrew the plug nut (f)

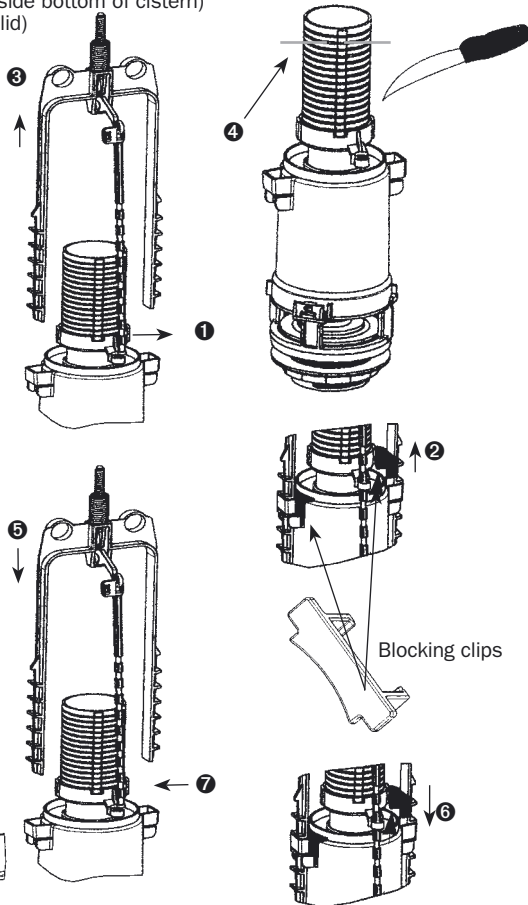


		Height of cistern H	
		Diameter D of hole in lid from 16 to 36 mm & 43 to 50 mm	Diameter D of hole in lid from 37 to 42 mm
Stirrup adjusting notch	1*	307 to 325	325 to 343
	2*	326 to 340	344 to 358
	3	341 to 355	359 to 373
	4	356 to 370	374 to 388
	5	371 to 385	389 to 403
	6	386 to 400	404 to 418

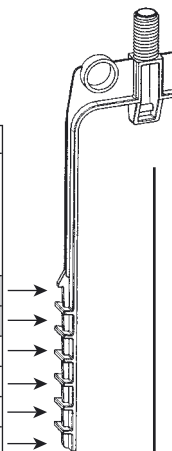



II - INSTALLATION

Position the mechanism in the cistern and attach it with the nut (f).

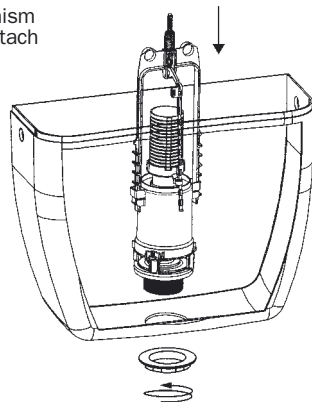

Stirrup notch	Overflow
1	Cut between e and f
2	Cut between b and c


III - ASSEMBLY OF CISTERN TANK

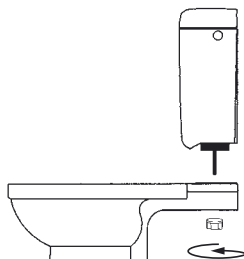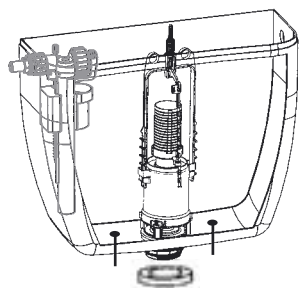

1 Attach the screws to the bottom of the cistern (see stack of parts indicated below)

2 Position the foam seal on the nut (f)

3 Position the cistern on the toilet bowl and attach it with the wing nuts

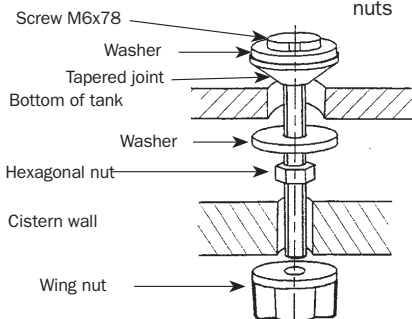

V - INSTALLING THE BUTTON

1 Fit the lid


2 If the lid hole (D) is < 37 mm or > 42, remove the rose (b)

3 Position the button on the lid and screw down (without pushing the central part) until it locks.

N.B. :

**For mechanism Switch
(Ref. 22A)**


**Push once to flush.
Push again to interrupt.**

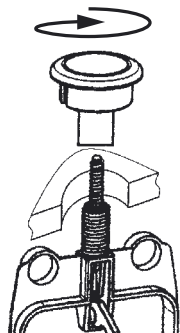

IV - ADJUSTMENT OF WATER LEVEL

First connect your float valve to the water system, open the stop valve and adjust the Full flush level using the float valve (see on back).

NB: the maximum water level should be 20 mm below the overflow (j).

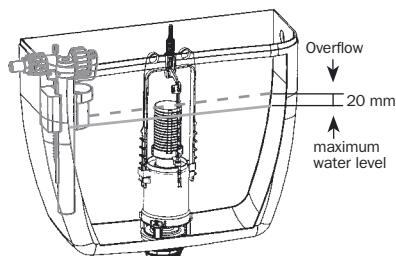

VI - MAINTENANCE

Replacement of the seal


1 Open the cistern and turn the mechanism a quarter turn to separate it from the plug

2 Remove the seal attaching clip

3 Replace the seal

4 Fit the clip then relocate the mechanism, locking it on the plug


5 Close the cistern making sure that the control button is correctly assembled (see § V)

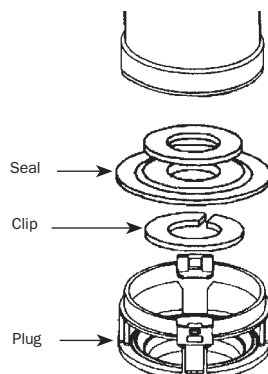

INSTALLING THE FLOAT VALVE


ROBECO 06 and STANDARD 15EL

- 1 Position valve
- 2 Fasten with nut
- 3 Connect to water supply
- 4 Adjust water level with the adjustment screw (15 EL) or by bending the rod (06)

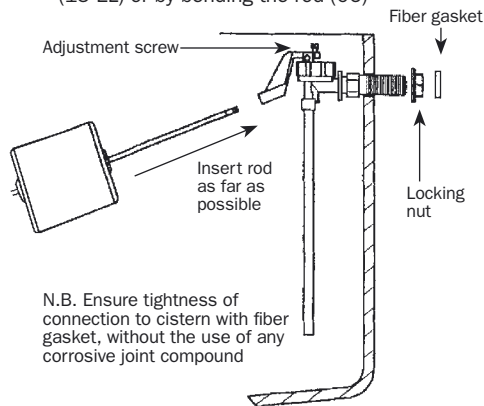


COMPACT 95L

- 1 Position valve
- 2 Fasten with nut
- 3 Connect to water supply
- 4 Adjust water level with the adjustment screw

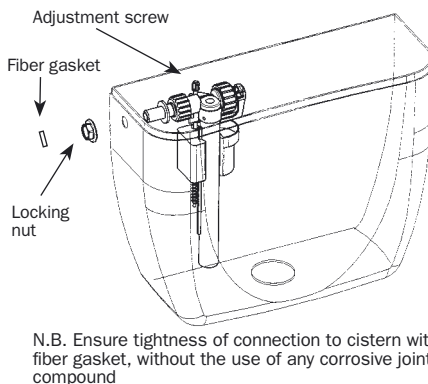

COMPACT 99B and HANDY 93B

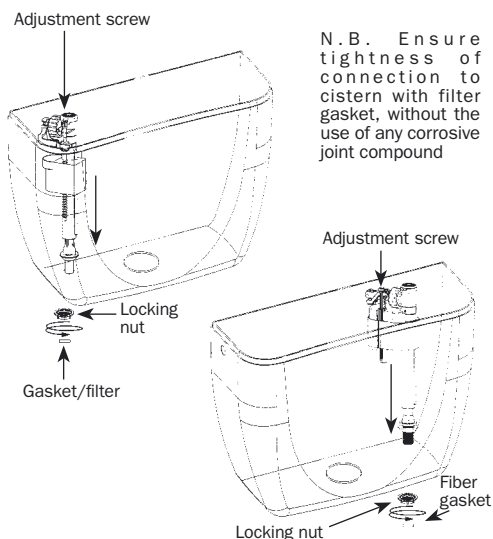

MAINTENANCE (95L & 99B)

